


Knotty Alder 2 Part Door **ASSEMBLY GUIDE**




ASSEMBLY INSTRUCTIONS

Note: These instructions refer to Double X, Double Z, Single X and 2 panel knotty alder Doors only. (See pages 4 and 5 for dimensions.)


Double X

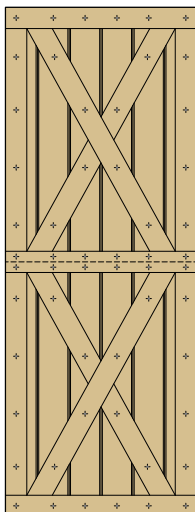


Double Z

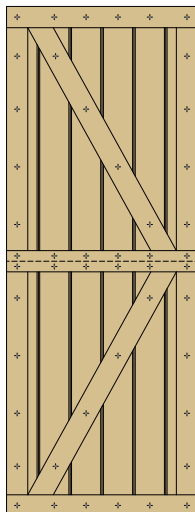

Single X

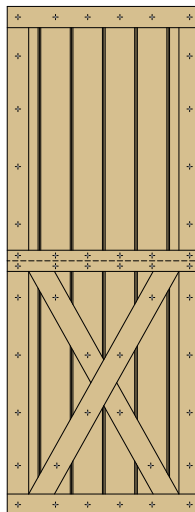


2 Panel

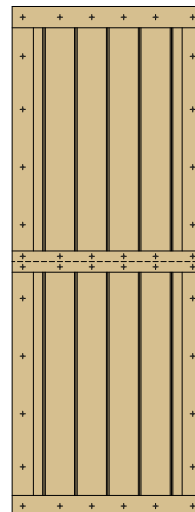


Parts Included


Door Half 1

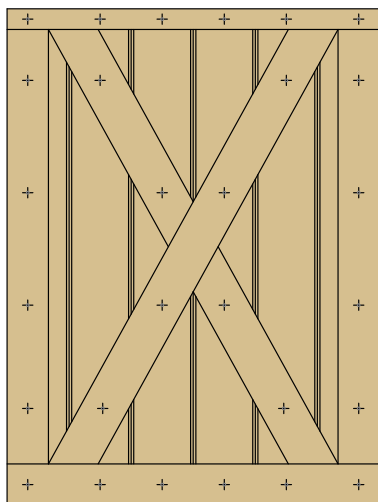


Door Half 2

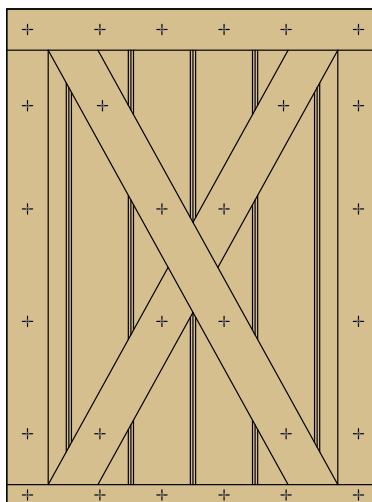


Connector Piece



Allen Wrench



Screws (x10)



Parts Needed



Scissors

*Scissors not included.


Note: Chevron door shown for presentation purpose only.

ASSEMBLY INSTRUCTIONS

Step By Step Instructions

Step


1

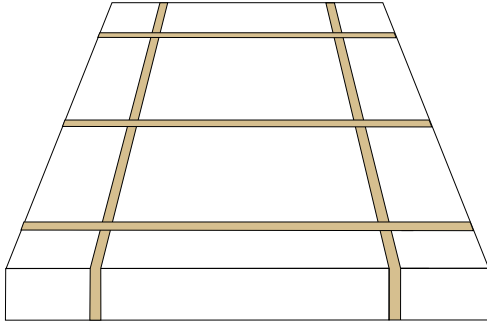

Remove plastic banding straps from box with scissors.

Step


2

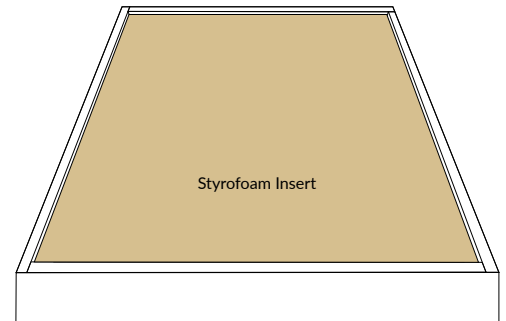

Remove Box Top. Foam inserts visible.

Step

3

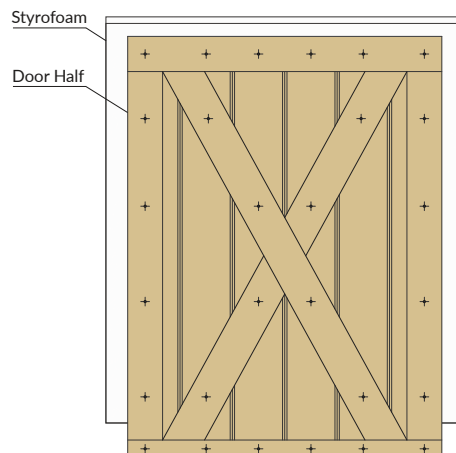


Remove 1st styrofoam insert and place it on floor or table. Remove first door half from box. Remove protective door bag from door. Place 1st door half face up onto the styrofoam insert.

ASSEMBLY INSTRUCTIONS

Step


4

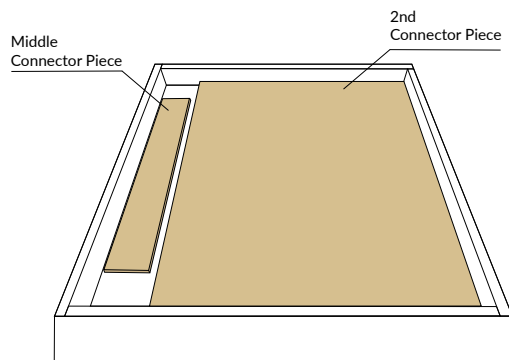

Remove 2nd styrofoam insert from the box and place it onto floor or table next to the first insert and door half. Remove parts and connector piece from shipping box.

Step


5

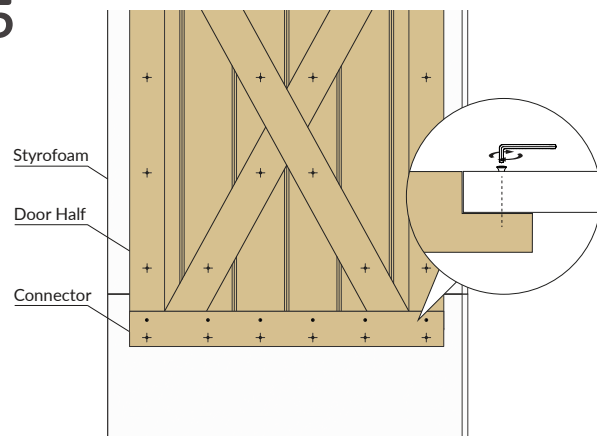

Place middle connector piece into recessed portion of the 1st door half with holes face upwards. Align the holes in the connector piece to the holes in the first door half. Using the provided Allen wrench and fasteners, mount the connector piece to the door half. Make sure fasteners are hand tightened in.

Step


6

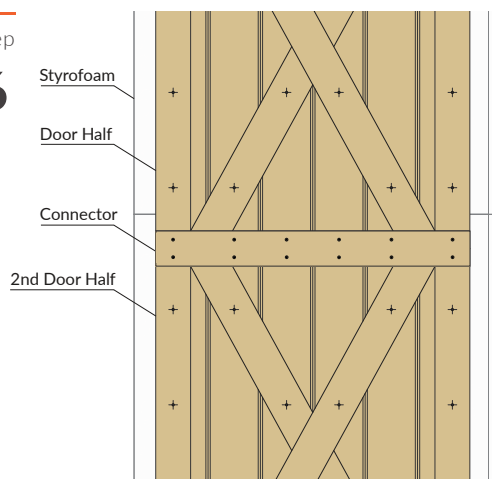

Remove 2nd door half, and place it on the 2nd styrofoam insert... aligning the door half over the connector piece. Complete assembly by mounting 2nd door half to connector with remaining fasteners.

Step

7

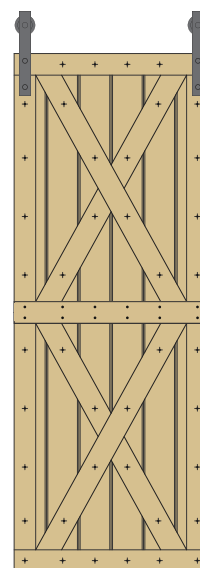


Assemble rollers onto door for final assembly.

Note: Hardware sold separately. Please contact us at info@bandroorz.com or at 713-400-6626 if additional assistance is needed.


ASSEMBLY INSTRUCTIONS

Kotty Alder Two-part 7ft Door Dimensions


Double X

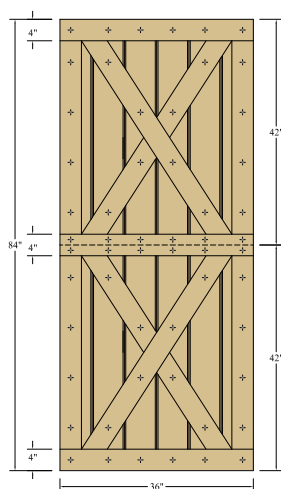


Double Z

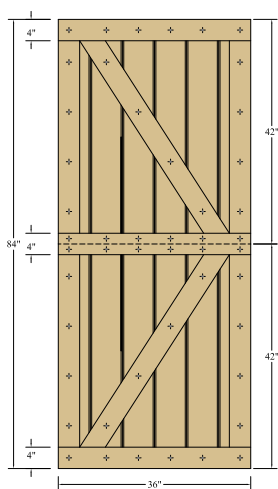


Single X

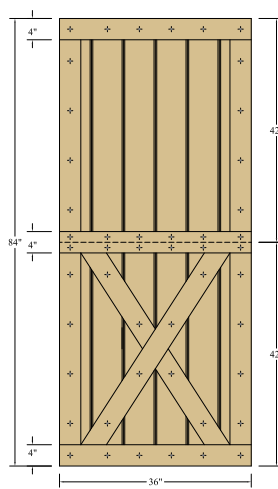


2 Panel

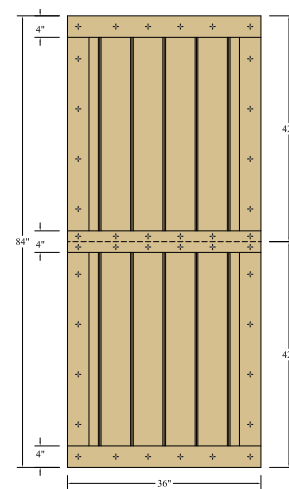


Double X

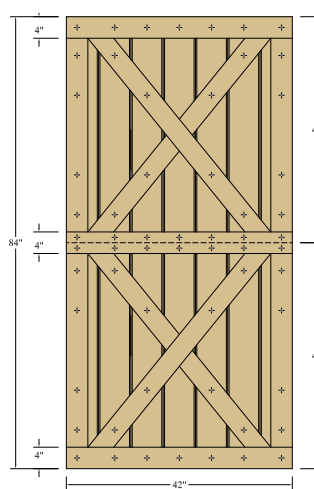


Double Z

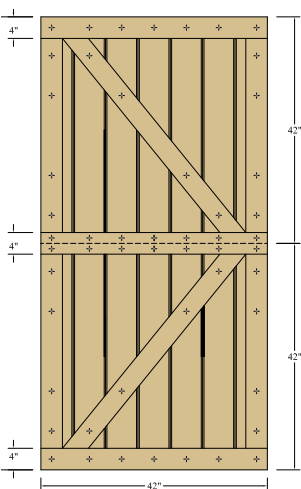

Single X

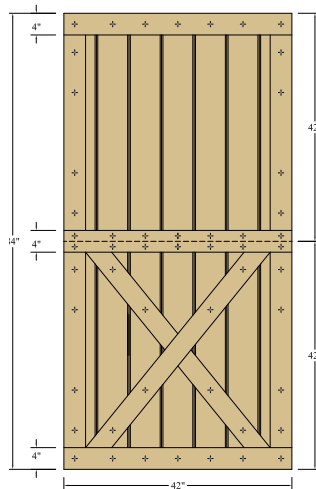


2 Panel

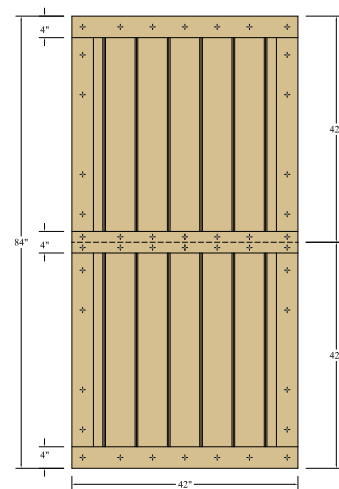


ASSEMBLY INSTRUCTIONS

Kotty Alder Two-part 8ft Door Dimensions


Double X

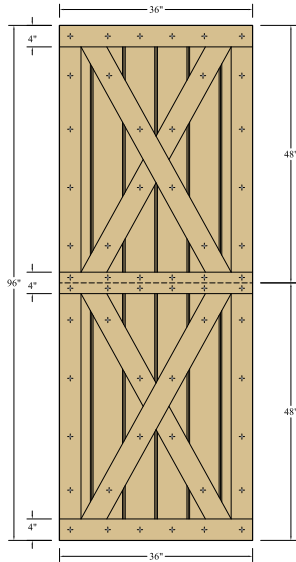


Double Z

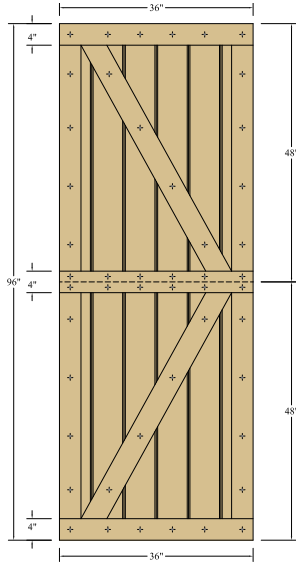


Single X

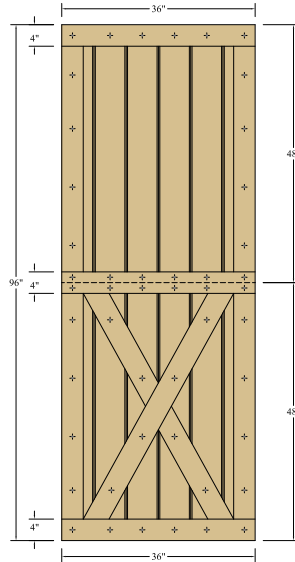


2 Panel

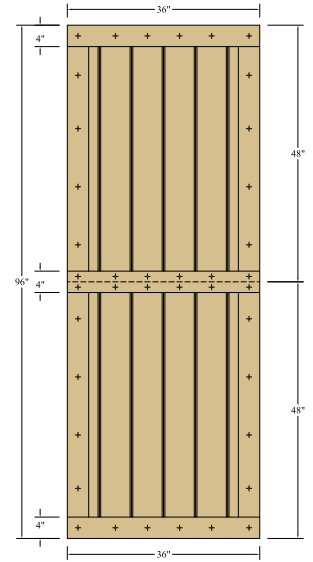


Double X

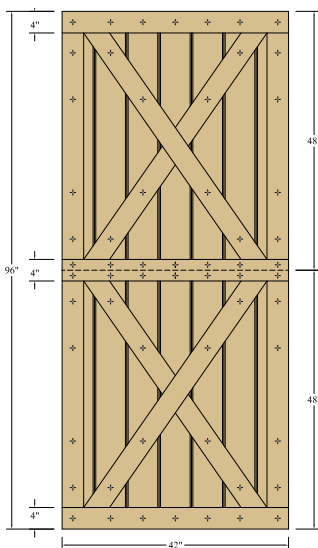

Double Z

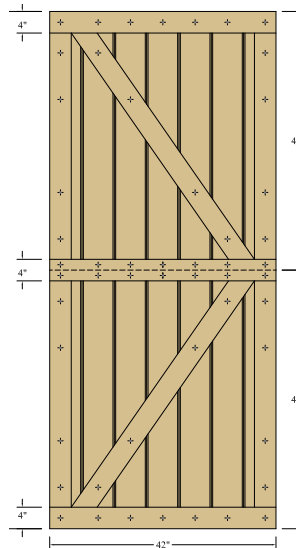

Single X

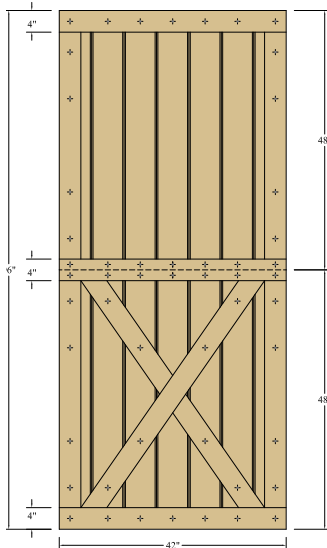

2 Panel

